



Notes:

- ① Burner lengths vary by model.
- ② The boiler door including burner should be able to swing open through 90° providing access to the burner head and combustion chamber for cleaning and maintenance.
- ③ A minimum distance of 200mm must be maintained between boiler castings. If the door handing is as shown, then it should be noted that burner lengths vary by model and may need increasing.
- ④ At least 200mm should be allowed to the side of the boiler for fitting the casing. After fitting the casing the boiler may be moved closer to the wall, but no closer than 60mm. Burner clearance will be required if handing is opposite to that shown.

Please contact hamworthy technical department for further assistance.  
 Tel: 01202 662500  
 Email: [technical@hamworthy-heating.com](mailto:technical@hamworthy-heating.com)

Note: All dimensions in mm unless otherwise stated.